


BATTERY RACK

PAGE 1 OF 3

BPB-BR

ASSEMBLY INSTRUCTIONS

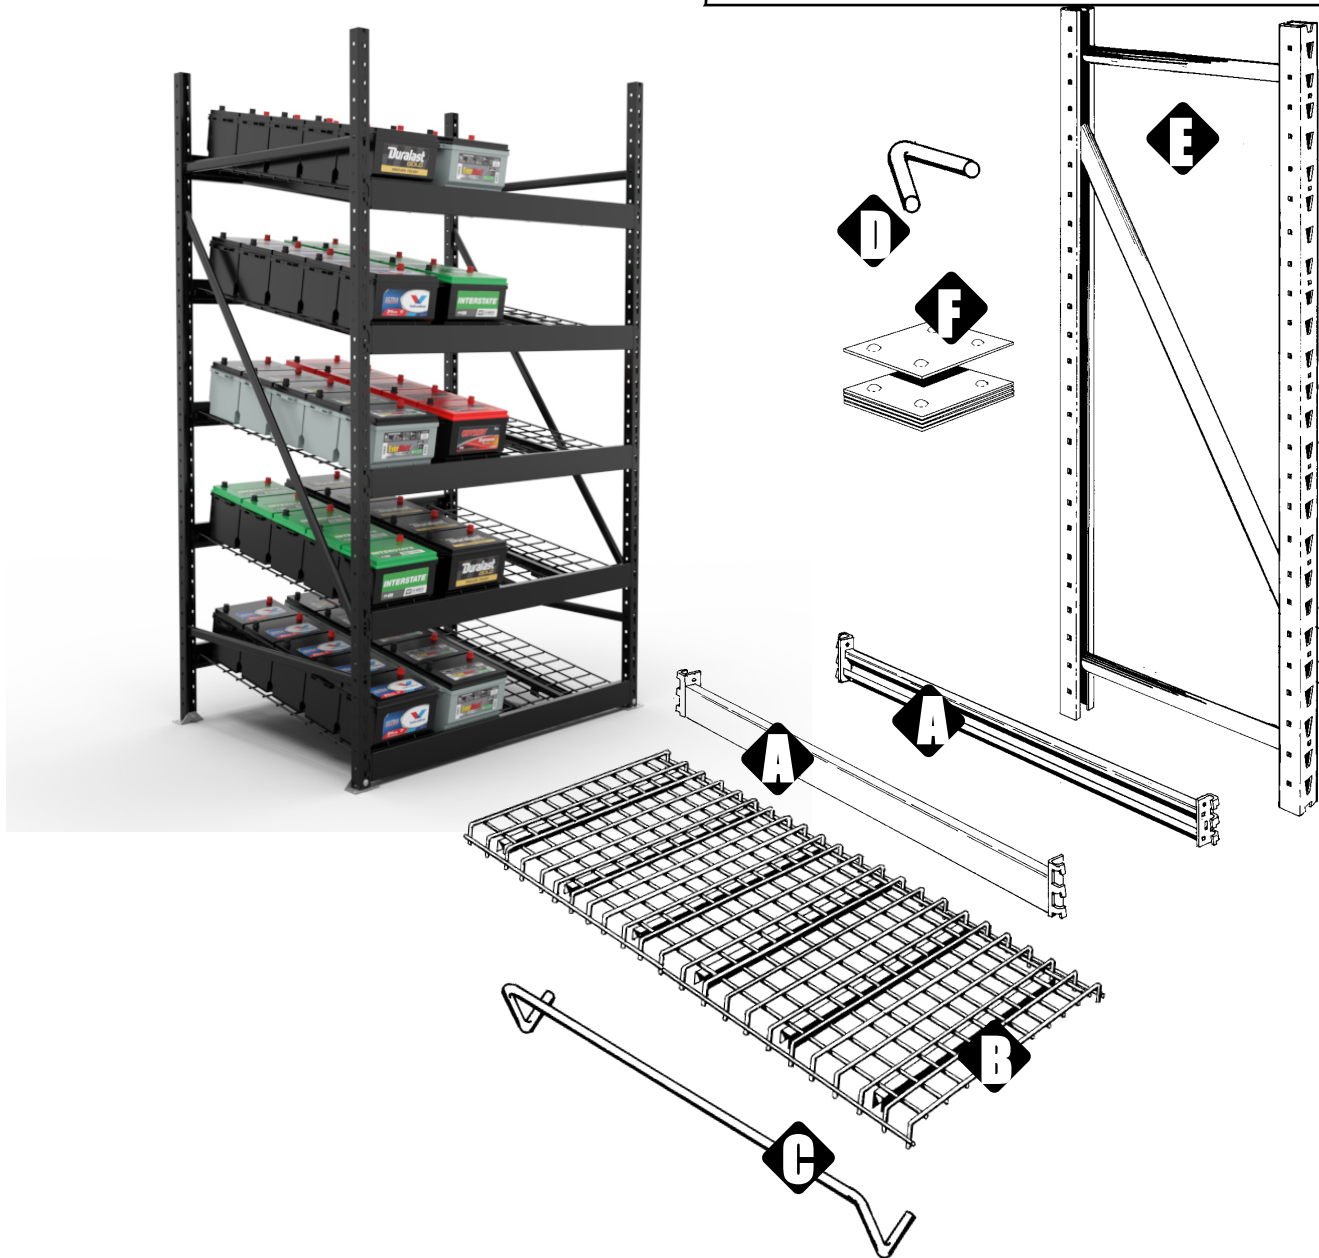

Quantity of Each Part are as follows

	Starter	Add On
<A> Gravity Feed Beams - HMGFB-RD	10	10
 Gravity Feed Deck - HMGFWD	5	5
<C> Battery Rack Retainer Wire - BRRW	10	10
<D> Widespan Retainer Pin - WSREP	20	20
<E> Widespan Regular Duty Frame - RDWF	2	1
<F> Widespan Leveling Shim - WSLS-10	2	2

BATTERY RACK

PAGE 2 OF 3



BPB-BR

ASSEMBLY INSTRUCTIONS

RECOMMENDED HEIGHTS OF BEAM/DECK LEVELS

NOTE: Locations of Top and Bottom Decks and Beams should be adhered to strictly according to this diagram.

Middle Shelves can be spaced differently if necessary, as long as spacing at front and back of shelf is kept equal.

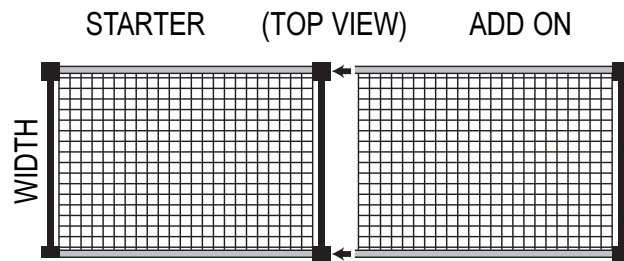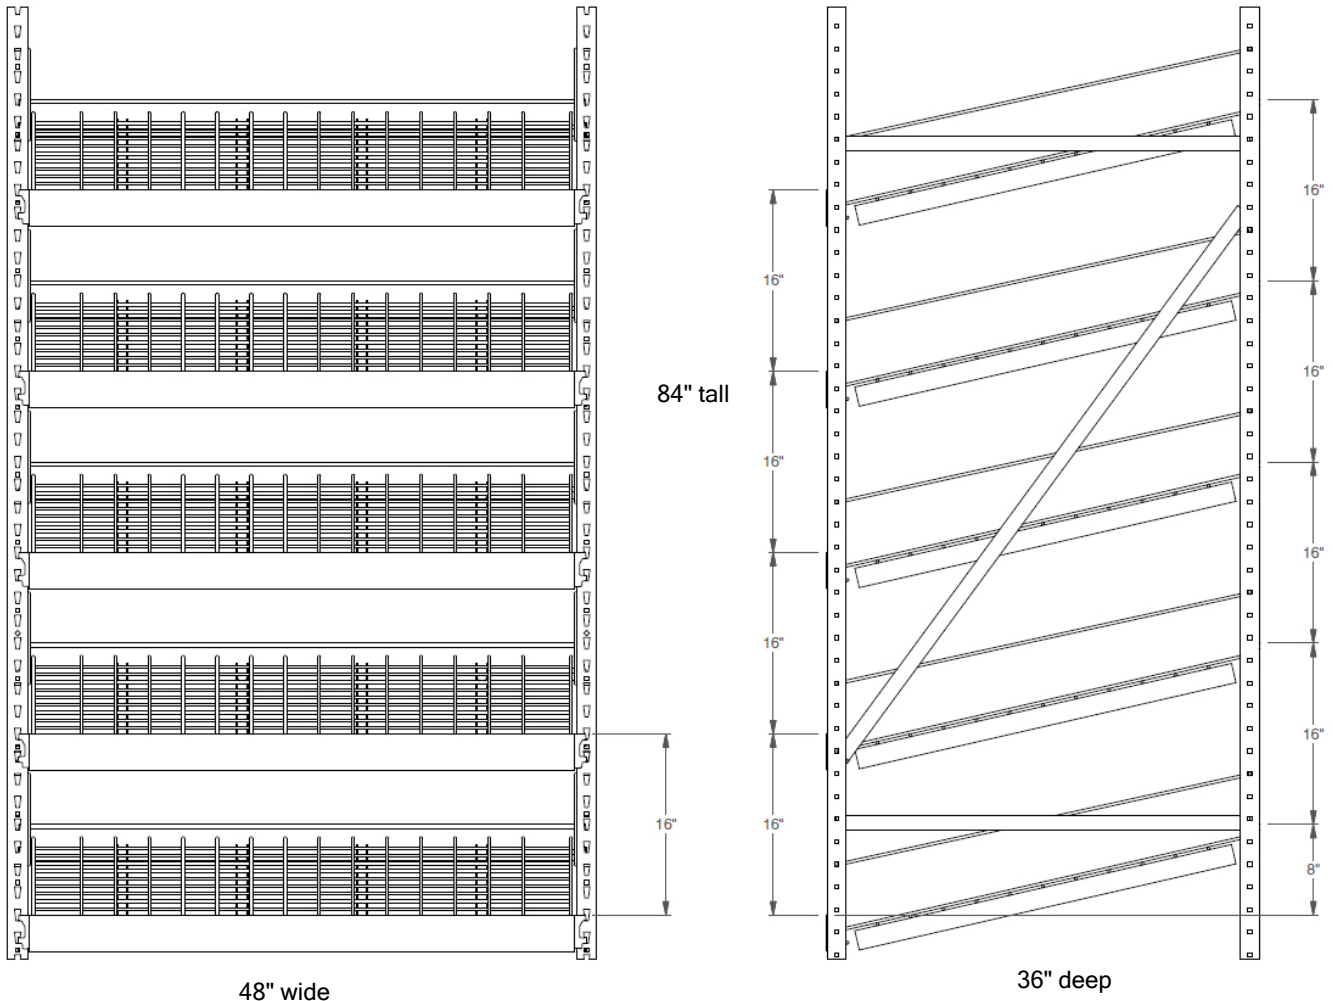

BATTERY RACK

BPB-BR

ASSEMBLY INSTRUCTIONS

1

Two beams and four retainer pins are required for each level of gravity feed decks. To install the bottom pair of beams, hold one frame upright (see image for top and bottom identification) and install a beam at floor level. Hold the 2nd frame upright and install the other end of the beam at floor level on it, as well. The frames will now stand alone. This beam now installed is the front of the rack.

2

Insert one leg of a retainer pin through the hole where the upright and beam bracket line up (see diagram). Do this for all beams installed.

3

Install the 2nd beam for the bottom shelf. This will be installed on the opposite (rear) side of the rack. See previous page diagrams for location to install this beam. Choose diagram based on height of rack you are assembling.

4

To install the wire grid deck, insert the down lip of a deck in to the open rear side of the front beam. Lower the rear edge of the deck and insert the down lip at the rear of the deck in to the open side of the rear beam.

5

Working upward, repeat steps to install the remaining beams and decks. See previous page for recommended installed heights.

6

Once decks and beams are installed, retainer wires must be installed. At the first square hole above each beam, insert the wire as shown, and rotate the end tab upward.

7


Check that all frame uprights are touching the floor... if any uprights are off the floor, use the stacking leveling shims under each upright to eliminate rocking.

8

For installation of ADD sections, repeat above steps using a frame of the STARTER section as the first frame in step 1.

9

If the installation is for the Retail version, place the magnetic tag holder on the face of each front beam. The sign holder is normally placed at the top front, but may be placed at the rear top by reversing end to end.

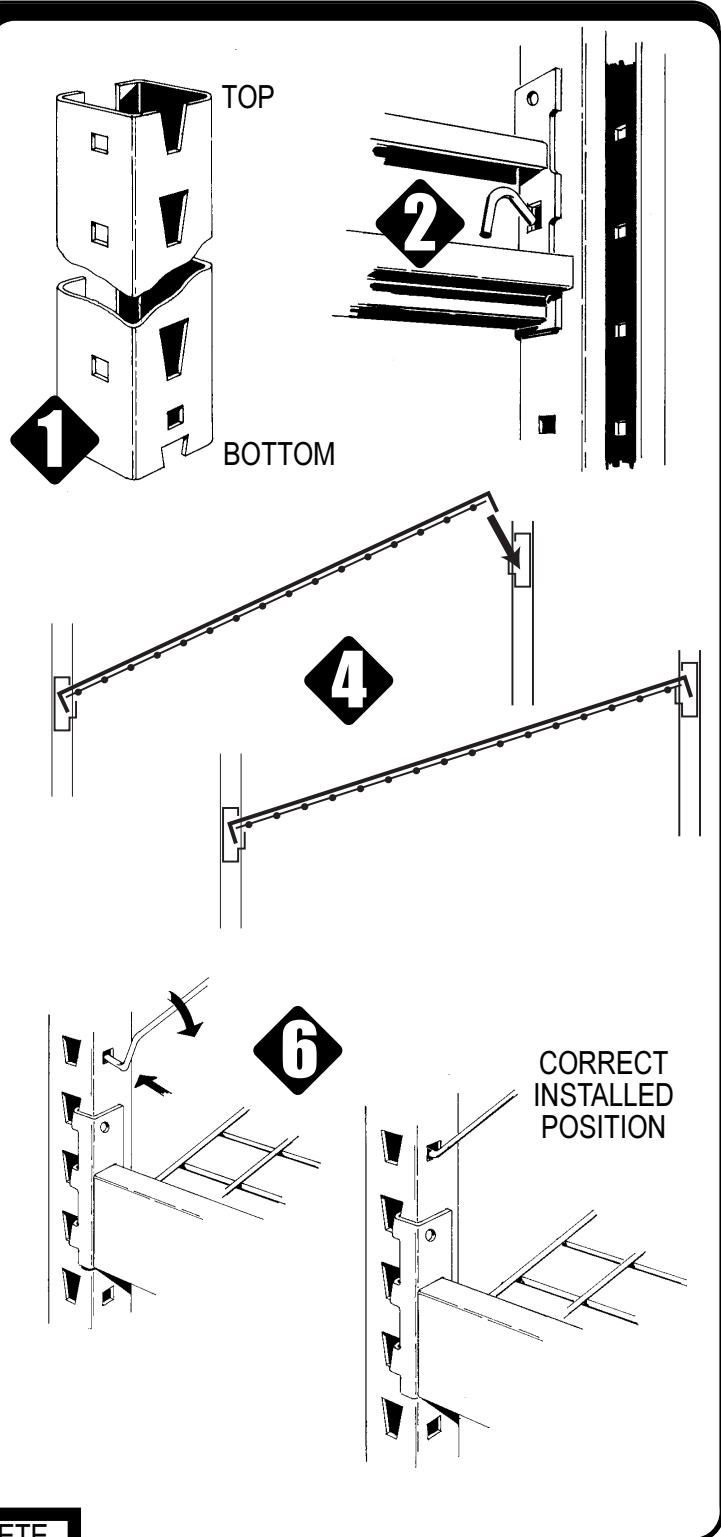
ASSEMBLY COMPLETE

madix™
STORE FIXTURES

MIDWEST RETAIL SERVICES, INC 800-576-7577 INFO@MW-RS.COM

REV
2025.06